



## The main points in brief

1



Load the laundry and close the door.

 


Switch the dryer on by turning the programme selector to the required programme.



Press the Start button.


2



End of the programme.




 Remove the laundry.

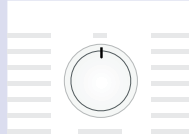


Switch the dryer off.

 3

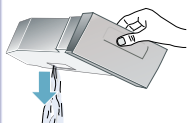

Empty the condensate container.

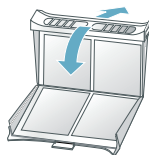 


Clean the fluff filter.





## Getting to know your appliance

 
### Dryer

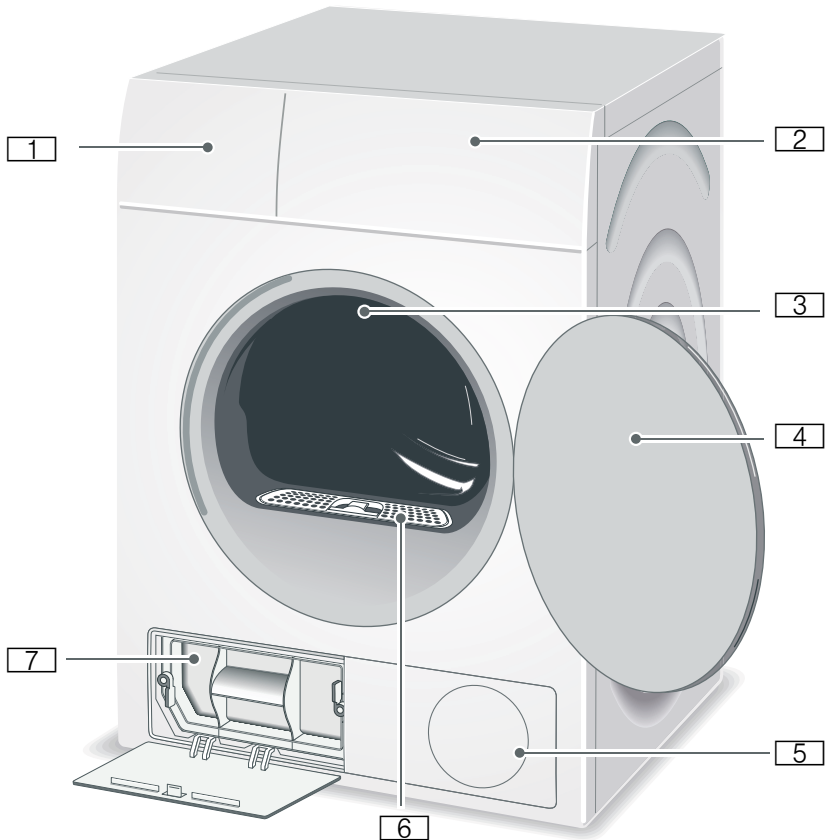

- 1 Condensate container
- 2 Control and display panel
- 3 Drum interior light\*
- 4 Dryer door
- 5 Air inlet
- 6 Fluff filter
- 7 EasyClean filter

\* depending on the model

## Control panel

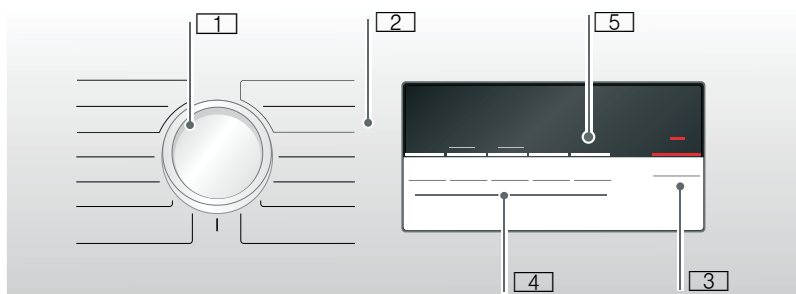 

**1** **Programme selector** for switching the dryer on/off and selecting the programme.

**2** **Programmes** → *Page 21.*


**3** **Start button** for starting or interrupting the programme → *Page 23.*

**4** **Buttons** for applying default programme settings → *Page 23.*

**5** **Display panel** → *Page 19.*

## Display panel

  
## Buttons on the display panel

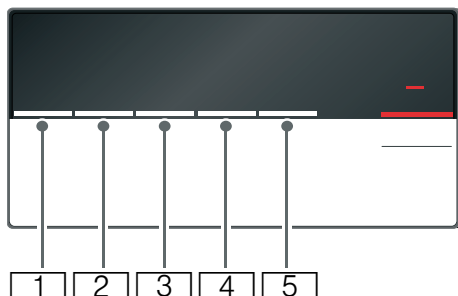


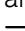
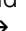
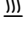





- ☐ 1 Degree of dryness.
- ☐ 2 Drying Time.
- ☐ 3 Ready in.
- ☐ 4 Anti-Crease.
- ☐ 5 Low-Heat.

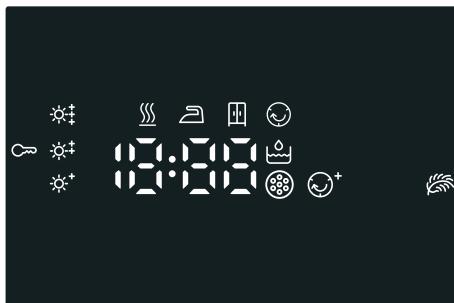For a detailed description of all buttons, see → *Page 23* onwards.

## Display panel








-  Empty the condensation container  
→ *Page 26.*
-  Clean the fluff filter → *Page 27*  
and clean the EasyClean filter  
→ *Page 30.*
-    - **P - End**: Programme  
progress for Dry, Iron Dry,  
Cupboard Dry, Anti-Crease, Pause  
and End of programme.
-  Childproof lock active .
- + Anti-Crease selected.
-  Low-Heat selected.
- + Degree of dryness selected.
- 1:27** Expected programme duration in  
hours and minutes.
- 3 h** Programme will end in 3 h/hours  
when the "Ready in" time is  
selected.







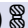


## Programmes and buttons

### Programmes

Programme and fabrics	Maximum load and programme settings/info
Name of the programme Which fabrics is the programme suitable for?	The maximum load is based on the dry weight of the fabrics Possible programme settings
<b>Algodón/Algodão (Cottons)</b>  Extra seco (Cupboard Dry Plus)  Hard-wearing, heat-resistant fabrics that are made of more than one layer of cotton or linen and do not dry readily.	<b>8 kg</b>
<b>Algodón/Algodão (Cottons)</b>  Seco para guardar (Cupboard Dry)  Normal, hard-wearing and heat-resistant fabrics made of a single layer of cotton or linen.	<b>8 kg</b>
<b>Algodón/Algodão (Cottons)</b>  Seco (Iron Dry)  Normal, hard-wearing and heat-resistant fabrics made of a single layer of cotton or linen that need to be damp after drying and are suitable for ironing or hanging up.	<b>8 kg</b>
<b>Sintéticos (Easy-Care)</b>  Extra seco (Cupboard Dry Plus)  Synthetic or blended fabrics that are made of more than one layer and do not dry readily.	<b>3.5 kg</b>
<b>Sintéticos (Easy-Care)</b>  Seco para guardar (Cupboard Dry)  Normal synthetic or blended fabrics made of a single layer.	<b>3.5 kg</b>
<b>Sintéticos (Easy-Care)</b>  Seco (Iron Dry)  Normal synthetic or blended fabrics made of a single layer that need to be damp after drying and are suitable for ironing or hanging up.	<b>3.5 kg</b>
<b>Sport</b>  Self-drying sportswear made of performance fibres, microfibres and synthetics.	<b>1.5 kg</b>
<b>Toallas/Toalhas (Towels)</b>  Hard-wearing towels made of cotton.	<b>6 kg</b>
<b>Mix</b>  Mixed load consisting of cotton and synthetic fabrics.	<b>3 kg</b>

<b>Caliente/Quente (Time programme warm)</b> 	<b>3 kg</b>
All types of fabric; time programme. Suitable for pre-dried or slightly damp laundry and for drying off multi-layered, thick laundry. For drying individual items of laundry.	You can adjust the programme length using the button for the drying time.
<b>Notes</b> <ul style="list-style-type: none"><li>■ Only dry wool, sports shoes and soft toys with the basket for woollens → <i>Page 14</i>.</li><li>■ In the time programme, the laundry's residual moisture is not automatically detected. If the laundry is still too damp after the drying programme, repeat the programme and, if required, extend the programme length.</li></ul>	
<b>Frio (Timed programme cold)</b> 	<b>3 kg</b>
For loosening up or airing clothing that has hardly been worn. For drying individual items of laundry.	You can adjust the programme length using the button for the drying time.
<b>Camisas/Blusas (Shirts/Blouses)</b> 	<b>1.5 kg</b>
Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics.	
<b>Rápido 40 min (Rapid 40)</b> 	<b>1 kg</b>
Synthetics and light cottons.	
<b>Plumas/Penas (Down)</b> 	<b>1.5 kg</b>
Fabrics, pillows, bedspreads or eiderdowns filled with down. Dry large items individually.	
<b>Acabado lana/lãs (Woollens finish)</b> 	<b>0.5 kg</b>
Fabrics made from wool or a wool blend that are suitable for tumble drying.	

## Buttons


Buttons	Explanations and notes
<b>Note:</b> Not all buttons and their functions can be selected in all programmes.	
<b>Ajuste secado (Drying level)</b> 	<p>If your laundry is too damp after drying, you can adjust the drying settings, e.g. Cup-board Dry, using the drying level button. The drying setting can be increased in three stages from  to  using the drying level button.</p> <p>Once you have adjusted the drying level, this setting will be retained even after the dryer has been switched off.</p> <p><b>Note:</b> The higher the degree of dryness, the longer the programme duration.</p>
<b>Duración/Duração (Drying time)</b> 	Adjust the programme length for the time programmes. Between 20 minutes and 3 hours, in 10-minute increments.
<b>Terminado en/em (Ready in)</b> 	The programme will end in 1-24 hrs. Set the "Ready in" time in increments of one hour to delay the start of the programme. The required number of hours after the programme ends is displayed in the display panel.
<b>Menos (Less ironing 60')</b> 	The drum moves the laundry at regular intervals after drying to prevent creasing. You can extend the automatic Anti-Crease function by 60 minutes after any programme has finished.
<b>Delicado (Gentle Dry)</b> 	Reduced temperature for delicate fabrics, e.g. polyacrylic or elastane. Selecting the button will extend the drying time.
 <b>3 seg. (Childproof lock 3 sec.)</b>	Press and hold the "Ready in" time button and the drying time button at the same time for 3 seconds to activate or deactivate the childproof lock.
<b>Início/Pausa + Carga (Start/Pause)</b> 	Starts or pauses the programme.

## Programme end

*End* appears in the display panel.

## Removing laundry and switching off the dryer

1. Remove the laundry.
2. Turn the programme selector to the "off" position.

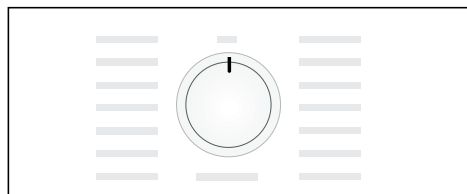


## Emptying the condensate container


By default, the condensation from the appliance runs into the condensation container.

Alternatively, you have the option of discharging the condensation water\* supplied depending on the model. If you choose to discharge the condensation water into the waste-water system, you will not need to empty the condensation container during the drying programme or after each time you use the dryer.

1. Pull out the condensate container horizontally.

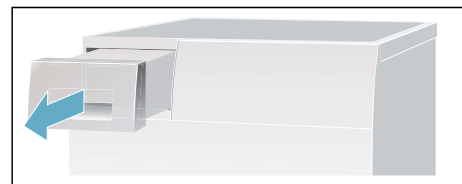

2. Pour out the condensation water.

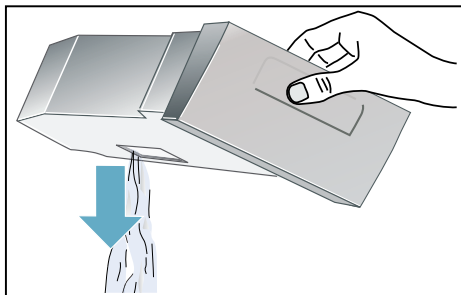


### Caution!

**Dirty condensation water may be harmful to your health and cause material damage.**

Condensation water is not suitable for drinking and may be contaminated with fluff. Do not drink the condensation water or reuse it.

3. Push in the condensate container until you feel it lock back into place in the dryer.

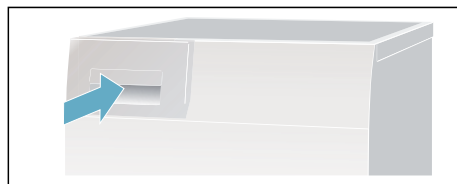

\* into the waste-water system via a drain hose




## Clean the fluff filter


**Note:** During drying, fluff and hair from the laundry is trapped by the fluff filter. If the fluff filter is blocked or dirty, this reduces the flow of air, which prevents the dryer from achieving its maximum performance. Clean fluff filters also reduce energy consumption and the drying time.

Clean the fluff filter **after each** drying cycle:

1. Open the dryer door and remove all fluff from the door.
2. Pull out the two-part fluff filter.

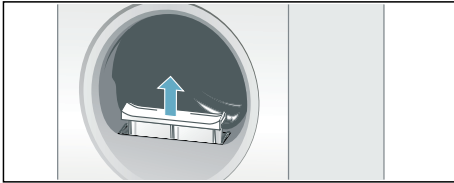


3. Remove the fluff from the recess in the fluff filter.

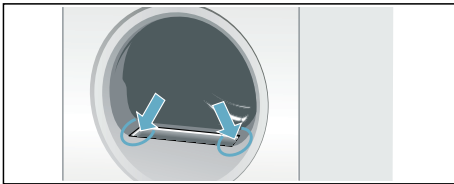


**Note:** Ensure that no fluff falls into the open shaft.

 
4. Pull apart the two-part fluff filter.

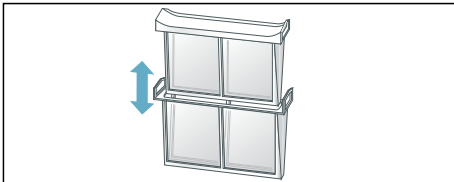

 
5. Open both filters and remove all the fluff.

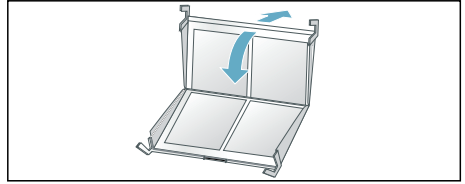

 6. Rinse away the fluff under warm, running water.

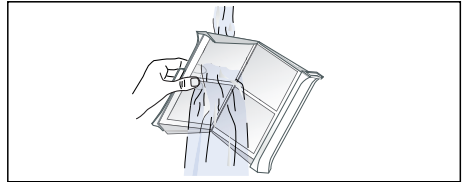

 7. Dry the fluff filter, close it and reinsert the two-part fluff filter.

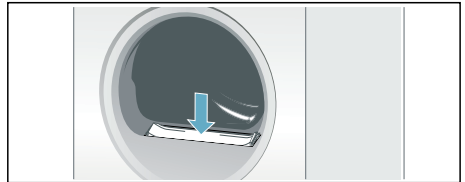

**Caution!**  
**The dryer may be damaged.**

Do not operate the dryer without a fluff filter or if the fluff filter is defective.