


5 Familiarising yourself with your appliance

5.1 Appliance


You can find an overview of the parts of your appliance here.

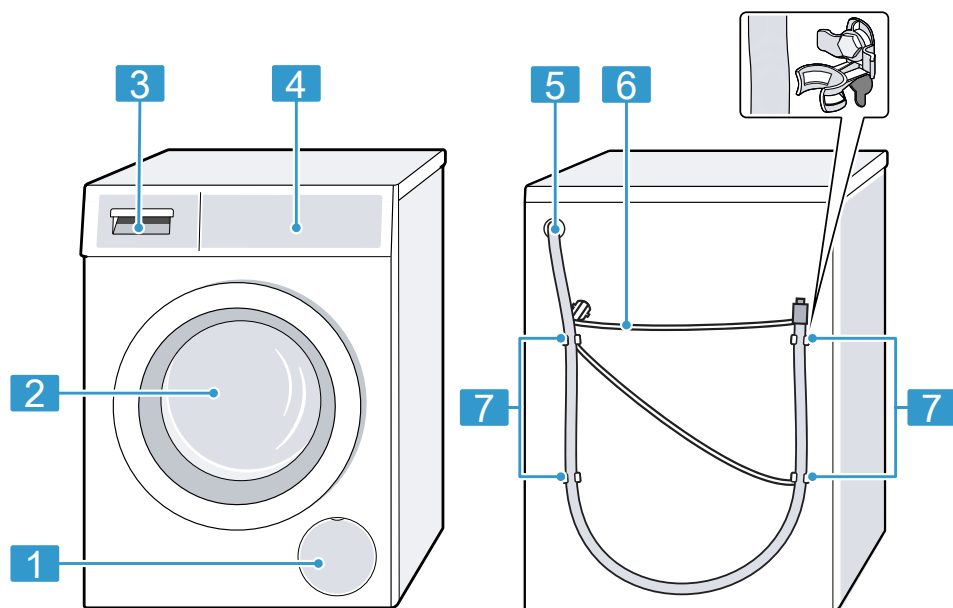

On certain models, specific details such as the colour and shape may differ from those pictured.

1	Maintenance flap for the drain pump → <i>Page 47</i>
2	Door
3	Detergent drawer → <i>Page 19</i>
4	Controls → <i>Page 19</i>
5	Water outlet hose → <i>Page 16</i>
6	Power cord → <i>Page 17</i>
7	Transit bolts → <i>Page 14</i>


5.2 Detergent drawer

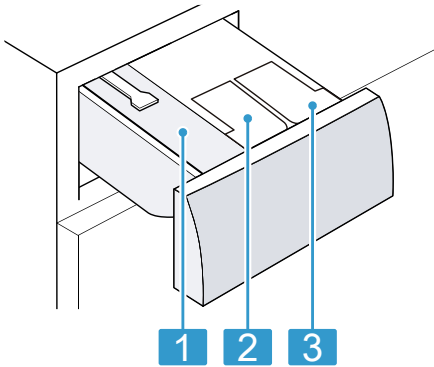

- | | |
|----------|----------------------------------|
| 1 | Manual dosing compartment |
| 2 | ☼: Dispenser for fabric softener |
| 3 | ⬮: Dispenser for detergent |

5.3 Controls


You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.

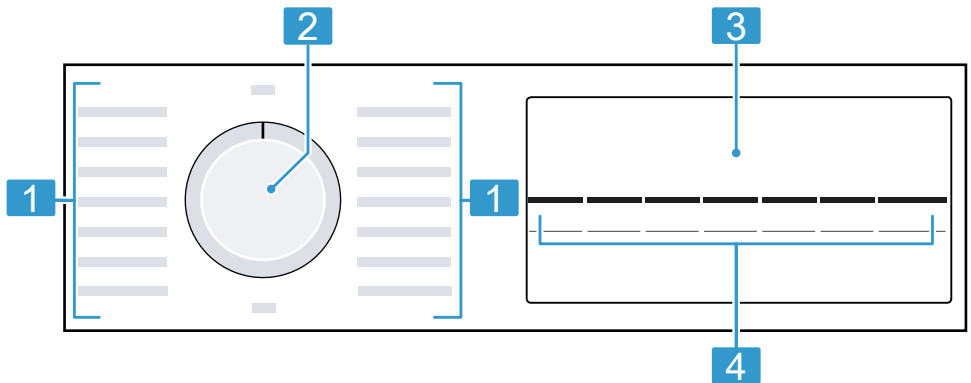

- | | |
|----------|--|
| 1 | Programmes → <i>Page 25</i> |
| 2 | Programme selector
→ <i>Page 38</i> |
| 3 | Display → <i>Page 20</i> |
| 4 | Buttons → <i>Page 23</i> |

6 Display

The display shows the current settings, options or relevant information.

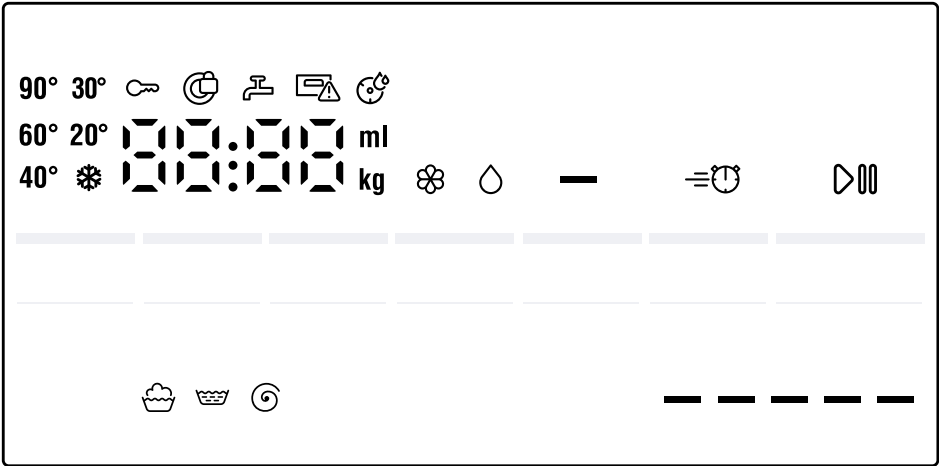

Display	Designation	Description
0:40 ¹	Programme duration/programme time remaining	Approximate expected programme duration or programme time remaining.
8 kg ¹	Recommended load	The maximum load capacity for the selected programme in kg.
- - - - 1400	Spin speed	Set spin speed in rpm. → "Buttons", Page 23 0= No final spin, only draining - - - -: Rinse Hold, no draining
* - 90	Temperature	Set temperature in °C. → "Buttons", Page 23 * (cold)
▷	Start/Pause	Start, cancel or pause ■ Lights up: The programme is running and can be cancelled or paused. ■ Flashes: The programme can be started or continued.
	Wash	Programme status
	Rinse	Programme status
	Spin	Programme status

¹ Example

Display	Designation	Description
- - - -	Rinse Hold	Programme status
End	End of programme	Programme status
	Childproof lock	■ lights up: The childproof lock is activated. ■ flashes: The childproof lock is activated and the appliance has been operated. → <i>"Deactivating the childproof lock", Page 41</i>
	Prewash	Prewash is activated. → <i>"Buttons", Page 24</i>
	SpeedPerfect	Short wash activated. → <i>"Buttons", Page 23</i>
— — — — ¹	Energy consumption 	Energy consumption for the selected programme. ■ — : Low energy consumption ■ — — — — — : High energy consumption
	Reminder to clean the drum	Flashes: Drum is dirty. Run the Limp. tambor  programme for cleaning and caring for the drum and the outer tub. → <i>"Cleaning the drum", Page 44</i>
	Dispenser for liquid detergent	■ Lights up: The intelligent dosing system for liquid detergent is activated. ■ Flashes: The fill level of the dispenser is below the minimum level. → <i>"Intelligent dosing system", Page 41</i>  (liquid detergent)
	Dispenser for fabric softener.	■ Lights up: The intelligent dosing system for fabric softener is activated. ■ Flashes: The fill level of the dispenser is below the minimum level. → <i>"Intelligent dosing system", Page 41</i>  (fabric softener)
50 ml ¹	Basic dosage	Basic dosage for detergent or fabric softener. → <i>"Basic dosage", Page 42</i>
:	Voltage control system	Flashes: The automatic voltage control system detects impermissible voltage drops. This will pause the programme. Note: The programme will continue when the voltage is permissible again.

¹ Example

Display	Designation	Description
.	Voltage control system	Flashes: The programme has been paused because of impermissible voltage drops. The voltage is permissible again and the programme will continue. Note: The programme duration is extended.
	Door	■ Lights up: The door is locked and cannot be opened. ■ Flashes: The door is not closed properly. ■ Off: The door is unlocked and can be opened.
	Tap	■ No water pressure. ■ The water pressure is too low.
	Detergent drawer	The detergent drawer has not been pushed in fully.
E:35 / -10 ¹	Error	Error code, error display, signal.
¹ Example		

7 Buttons

The selection of programme settings depends on the programme that is set. You can see the selection options for each programme in the overview for → "Programmes", Page 25.



Button	Selection	Description
Inicio/Pausa + Carga  (Start/ Reload/Pause)	■ Start ■ Cancel ■ Pause	Start, cancel or pause the programme.
SpeedPerfect 	■ Activate ■ Deactivate	Activate or deactivate a short washing programme. Note: Energy consumption increases. The washing result is not affected by this.
i-DOS  (Softener / Deter- gent)	■ Activate ■ Deactivate ■ Basic dosage	Briefly press the button to activate or deactivate the intelligent dosing system for fabric softener  or liquid detergent . Press the button for approx. three seconds to set the basic dosage. → "Intelligent dosing system", Page 41
Termin.  (Ready In)	1–24 hours	Set the programme end. The programme duration is already included in the set number of hours. Once the programme has started, the programme duration is displayed. Note: Use the button to adjust the basic dosage. → "Adjusting the basic dosage", Page 42
Temp. °C  (Tem- perature)	 – 90 °C	Adjust the temperature in °C.
Centrif.  (Spin)	– – – – 1400	Adjust the spin speed or activate – – – – (Rinse Hold). If – – – – is selected, the water is not drained at the end of the washing cycle and the spin cycle is deactivated. The laundry remains in the water used for rinsing. Note: Use the button to adjust the basic dosage. → "Adjusting the basic dosage", Page 42

Button	Selection	Description
 3 seg. (Child Lock 3 sec.)	■ Activate ■ Deactivate	Activate or deactivate the childproof lock. Disable the control panel to prevent unwanted or accidental operation. If the childproof lock is activated and the appliance has been switched off, the childproof lock remains activated. → "Childproof lock", Page 41
Prelav.  (Pre-wash)	■ Activate ■ Deactivate	Activate or deactivate prewash, e.g. for washing heavily soiled laundry. Note: If the intelligent dosing system is activated, the detergent will be dispensed automatically for the prewash and the main wash. If the intelligent dosing system is deactivated, place the detergent for the prewash directly in the drum.

Programme	Description	Programme settings
		i-DOS   i-DOS   Prelav.  Centrif.  - - - - (Rinse Hold) SpeedPerfect  Max. spin speed (rpm) ¹ Max. temperature (°C)
Eco 40 - 60	Note: To save energy, the actual washing temperature may deviate from the set washing temperature. The washing performance meets legal requirements. Wash items made from cotton, linen or blended fabrics. Note: Textiles which can be washed from 40 °C  up to 60 °C  as per the care symbol can be washed together. The washing performance corresponds to the best possible washing performance class according to the legal requirements. For this programme, the washing temperature is automatically adjusted depending on the load size, in order to achieve the best possible	• • • • - 1400 - 8
¹ Programme setting		

Programme	Description	Max. load (kg)	Programme settings
			i-DOS  i-DOS  Prelav.  Centrif.  -- -- (Rinse Hold) SpeedPerfect  Max. spin speed (rpm) ¹ Max. temperature (°C)
	energy efficiency with the best possible washing result. You cannot change the washing temperature.		
Sintéticos  (Easy Care)	Wash items made from synthetic or blended fabrics.	4	● ● ● ● ● 1200 60
Mix  (Mixed Fabrics)	Wash items made from cotton, linen, or synthetic or blended fabrics. Suitable for lightly soiled laundry.	4	● ● ● ● ● 1400 60
Delicado/Seda  (Delicate/Silk)	Wash delicate, washable items made from silk, viscose and synthetics. Use a detergent that is suitable for delicates or silk. Note: Wash especially delicate items or items with hooks, eyelets or clips in a mesh laundry bag.	2	● ● ● ● - 800 40

  ¹ Programme setting

Programme	Description	Programme settings						
		i-DOS  	●				●	
		i-DOS  	—				—	—
		Prelav. 	—				—	—
		Centrif.  — — — — (Rinse Hold)	●				●	—
		SpeedPerfect 	—				—	—
		Max. spin speed (rpm) ¹	800				1400	1400
		Max. temperature (°C)	40				—	—
	Max. load (kg)		2				—	—
 Lana/Lås (Wool)	Hand- or machine-washable items that are made from wool or contain wool. To prevent the laundry from shrinking, the drum moves the items very gently with long pauses. Use a detergent that is suitable for wool.							
 (Rinse)	Rinses and then spins the laundry, and then drains the water.							
 (Spin/Drain)	Spins and drains the water. If you only want to drain the water, activate 0. The laundry is not spun.							
¹ Programme setting								

Programme	Description	Programme settings
		i-DOS   i-DOS   Prelav.  Centrif.  - - - - (Rinse Hold) SpeedPerfect  Max. spin speed (rpm) ¹ 1200 Max. temperature (°C) -
	Max. load (kg) -	
	Use liquid detergent. Cleaning and caring for the drum. Use this programme in the following cases: ■ Before using the appliance for the first time ■ If you regularly wash at temperatures of 40 °C or lower ■ After a prolonged period of non-use Use washing powder or a detergent containing bleach. Halve the amount of detergent to avoid foaming. Do not use fabric softener. Do not use liquid detergent or detergent that is intended for woolens or delicates.	

¹ Programme setting

Programme	Description	Programme settings				
		i-DOS 				
		i-DOS 				
		Prelav. 				
		Centrif.  -- -- (Rinse Hold)				
		SpeedPerfect 				
		Max. spin speed (rpm) ¹	800			
		Max. temperature (°C)	60			

Programme	Description	Programme settings
		i-DOS 
		i-DOS 
		Prelav. 
		Centrif.  - - - - (Rinse Hold)
		SpeedPerfect 
		Max. spin speed (rpm) ¹
		Max. temperature (°C)
	Max. load (kg)	
	If you wish to reduce the programme duration to 15 minutes, activate SpeedPerfect . The maximum load is reduced to 2 kg.	
	¹ Programme setting	

14 Childproof lock

Secure your appliance against being operated unintentionally using the controls.

14.1 Activating the childproof lock

- ▶ Press and hold the two  **3 seg.** buttons for approx. 3 seconds.
- ✓ The display shows .
- ✓ The controls are locked.
- ✓ The childproof lock remains active even after the appliance has been switched off.

14.2 Deactivating the childproof lock

Requirement: To deactivate the childproof lock, the appliance must be switched on.

- ▶ Press and hold the two  **3 seg.** buttons for approx. 3 seconds.
- ✓  goes out in the display.

15 Intelligent dosing system

The optimum quantities of liquid detergent and fabric softener are dispensed automatically depending on the programme and settings.

15.1 Filling the dispenser

Note


In order to use intelligent dosing, fill the dispenser.

- Fill the dispenser only with suitable detergent and care products
→ Page 36.


- If you change the liquid detergent or fabric softener, empty and clean the dispenser beforehand.
→ "Cleaning the detergent drawer", Page 45

Requirement:   flashes.

1. Pull out the detergent drawer.
2. Open the dispenser lid.

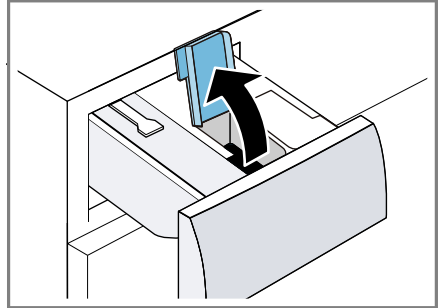

3. Pour liquid detergent  and fabric softener  into the relevant dispensers.
→ "Detergent drawer", Page 19

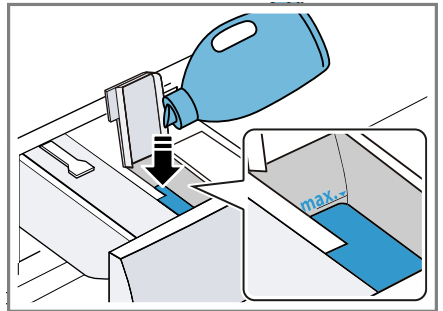

4. Close the dispenser lid.

Note: To prevent the detergent from drying out or drying up, do not leave the dispenser lid open for a long period of time.

5. Push in the detergent drawer.
6. Adjust the basic dosage
→ Page 42.

15.2 Basic dosage

The basic dosage depends on the manufacturer's instructions for the detergent, the water hardness and the degree of soiling of the laundry.

Always set a basic dosage that corresponds to the dosage for a standard load of 4.5 kg.

→ "Detergent dosage", Page 37

Adjusting the basic dosage

1. Press and hold for approx. 3 seconds.
 - ✓ The display shows the basic dosage set for O .
2. To adjust the basic dosage for $\otimes$, press .
3. To adjust the setting, press **- i-DOS +**.
4. To end the setting process, wait briefly.